# Airbag Systems

From October 2000

**Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".**

Relay location on the thirteen position auxiliary relay panel, above relay panel:

Relay panel:

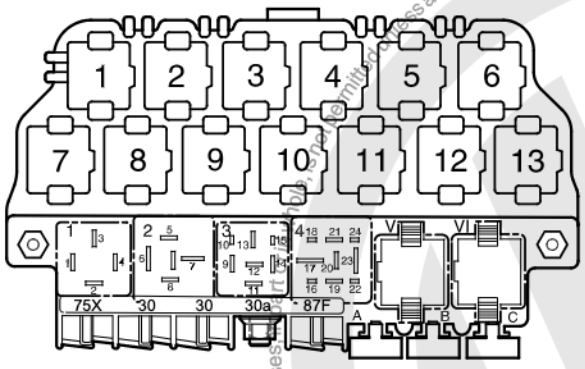


3B–20676

Relay location on the eight position auxiliary relay panel, behind relay panel:

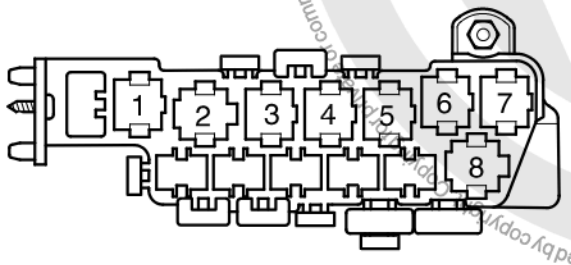


3B–20515

Note:

- *Number in parentheses indicates production control number stamped on relay housing.*

Fuse colors

Protected by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Volkswagen AG, unless authorised by Volkswagen AG, shall permit no access to third parties. Distribution for commercial purposes or publication is not permitted.

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

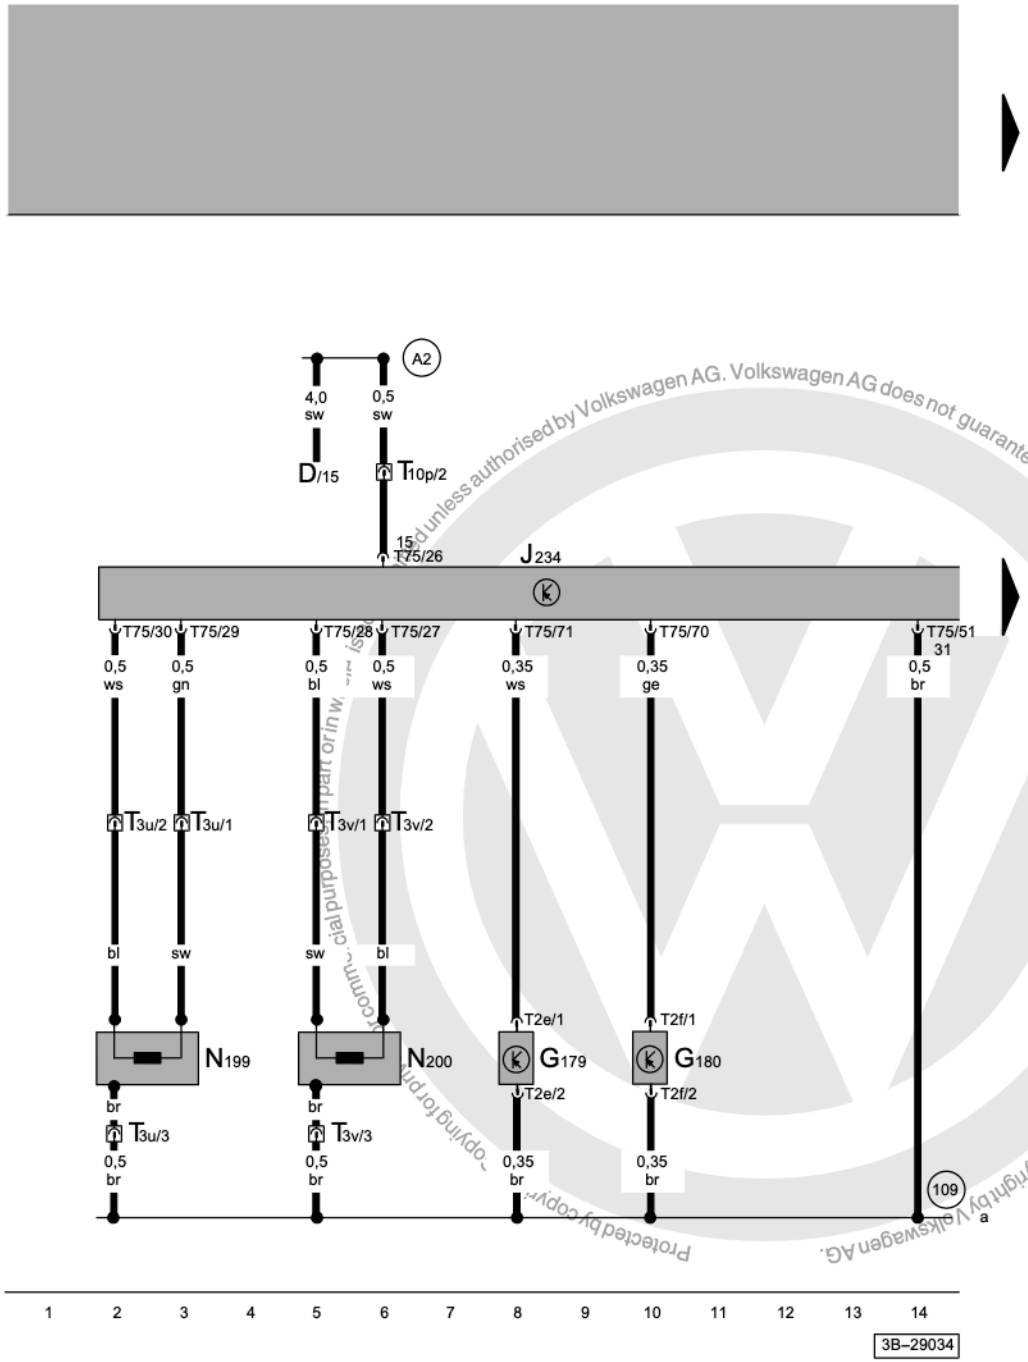


## Airbag Control Module, Igniter for side airbag, Crash sensor for side airbag

| | |
|---|---|
| D | Ignition/Starter Switch |
| G179 | Crash sensor for side airbag, driver's side |
| G180 | Crash sensor for side airbag, passenger side |
| J234 | Airbag Control Module |
| N199 | Igniter for side airbag, driver's side |
| N200 | Igniter for side airbag, passenger side |
| T2e | Double Connector |
| T2f | Double Connector |
| T3u | 3-Pin Connector, yellow, below driver's seat |
| T3v | 3-Pin Connector, yellow, below passenger's seat |
| T10p | 10-Pin Connector, yellow, connector station A-pillar, right |
| T75 | 75-Pin Connector, on Airbag Control Module |
| A2 | plus connection (15), in instrument panel wiring harness |
| 109 | Ground connection, in airbag wiring harness |

| | | |
|---|---|---|
| ws | = | white |
| sw | = | black |
| ro | = | red |
| br | = | brown |
| gn | = | green |
| bl | = | blue |
| gr | = | grey |
| li | = | lilac |
| ge | = | yellow |
| or | = | orange |
| rs | = | pink |

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

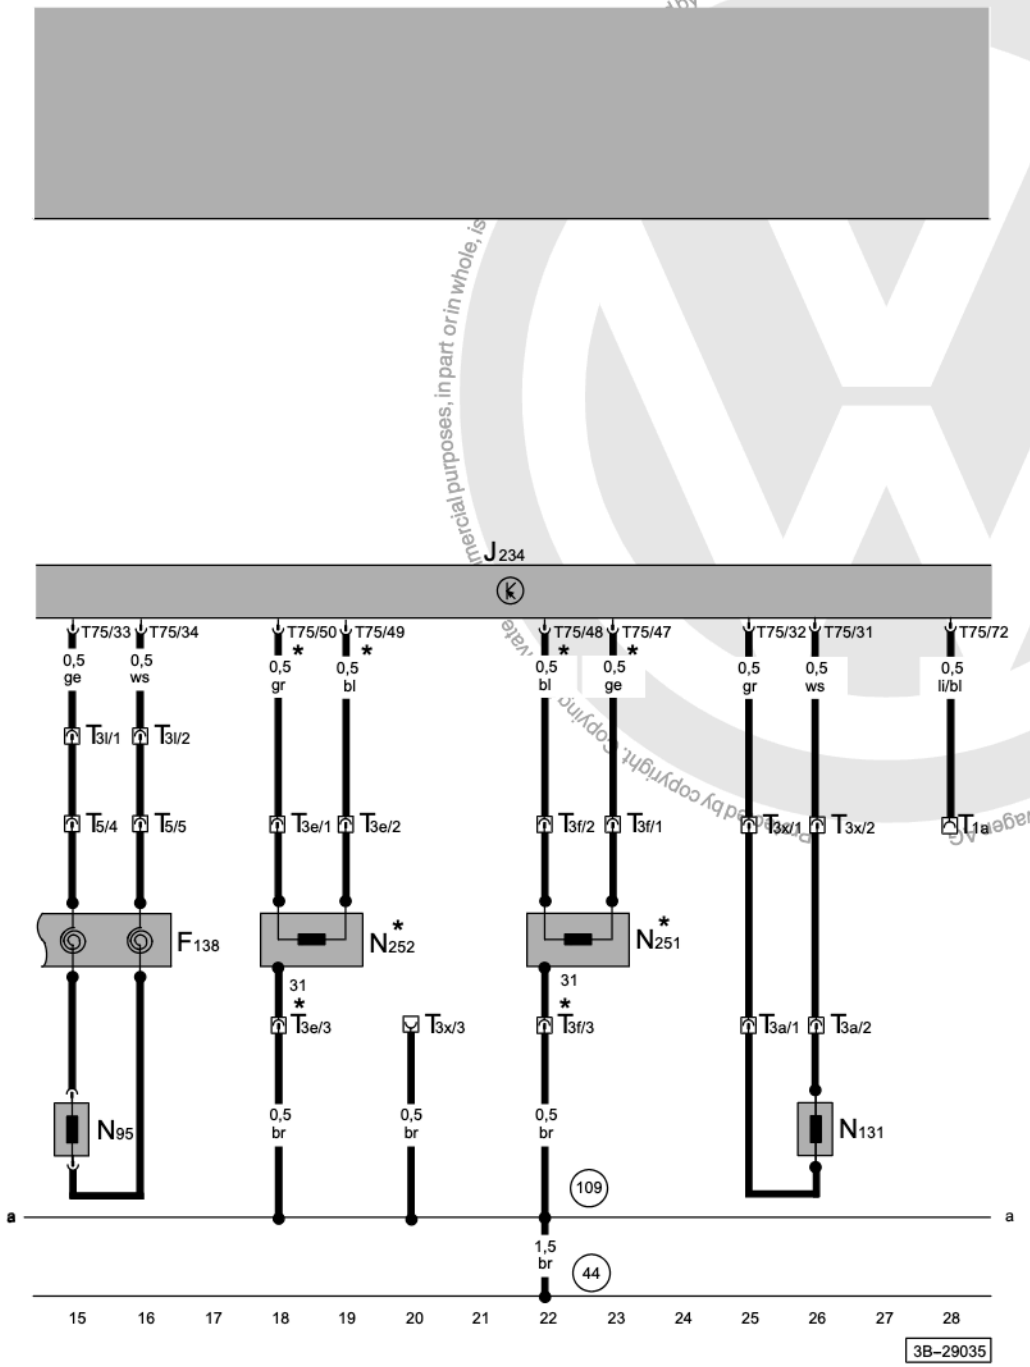


## Airbag Control Module, Driver's Side Airbag, Igniter for head airbag, Front Passenger's Side Airbag Igniter

| | |
|---|---|
| F138 | Airbag Spiral Spring/Return Spring With Slip Ring |
| J234 | Airbag Control Module, behind console |
| N95 | Driver's Side Airbag Igniter |
| N131 | Passenger's Side Airbag Igniter 1 |
| N251 | Igniter for head airbag, rear, driver side |
| N252 | Front Passenger Head Airbag Igniter |
| T1a | Single Connector, black, connector station A-pillar, right |
| T3a | 3-Pin Connector, behind instrument panel, right |
| T3e | 3-Pin Connector |
| T3f | 3-Pin Connector |
| T3l | 3-Pin Connector, yellow, connector station A-pillar, left |
| T3x | 3-Pin Connector, yellow, connector station A-pillar, right |
| T5 | 5-Pin Connector, yellow, behind steering column switch cover |
| T75 | 75-Pin Connector, on Airbag Control Module |
| 44 | Ground connection, on left A-pillar, lower part |
| 109 | Ground connection, in airbag wiring harness |
| * | vehicles with head airbag only |

| | | |
|---|---|---|
| ws | = | white |
| sw | = | black |
| ro | = | red |
| br | = | brown |
| gn | = | green |
| bl | = | blue |
| gr | = | grey |
| li | = | lilac |
| ge | = | yellow |
| or | = | orange |
| rs | = | pink |

Reproduced by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Reproduced by copyright. Copyright, private, commercial purposes, in part or in whole, is

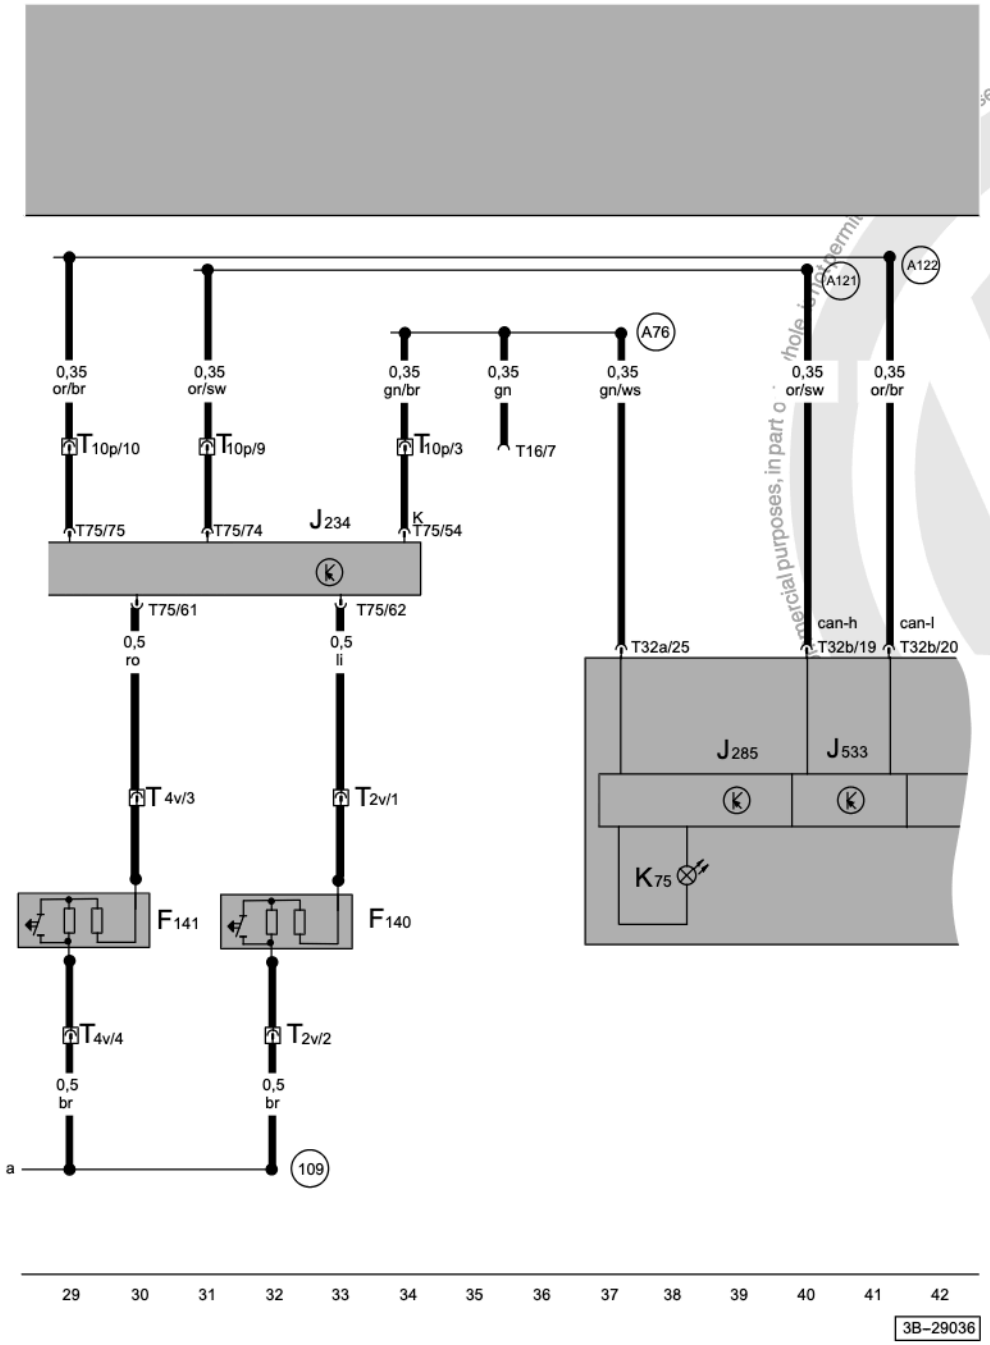


## Airbag Control Module, Control module with indicator unit in instrument panel insert, Data Link Connector (DLC) , Front seat belt microswitches

| | |
|---|---|
| F140 | Left Front Seat Belt Microswitch* |
| F141 | Right Front Seat Belt Microswitch* |
| J234 | Airbag Control Module, behind console |
| J285 | Control module with indicator unit in instrument panel insert |
| J533 | Data Bus On Board Diagnostic Interface |
| K75 | Airbag Malfunction Indicator Lamp (MIL) |
| T10p | 10-Pin Connector, yellow, connector station A-pillar, right |
| T2v | Double Connector |
| T4v | 4-Pin Connector |
| T16 | 16-Pin Connector, Data Link Connector (DLC) below instrument panel, left |
| T32a | 32-Pin Connector, blue, on instrument cluster |
| T32b | 32-Pin Connector, green, on instrument cluster |
| T75 | 75-Pin Connector, on Airbag Control Module |
| 109 | Ground connection, in airbag wiring harness |
| A76 | Connector (K-diagnosis wire) in instrument panel wiring harness |
| A121 | Connection (high bus) in instrument panel wiring harness |
| A122 | Connection (low bus) in instrument panel wiring harness |
| * | Scan Tool display text for these component codes may be different than indicated |

| | | |
|---|---|---|
| ws | = | white |
| sw | = | black |
| ro | = | red |
| br | = | brown |
| gn | = | green |
| bl | = | blue |
| gr | = | grey |
| li | = | lilac |
| ge | = | yellow |
| or | = | orange |
| rs | = | pink |

Protected by copyright. Copyright by Volkswagen AG.